


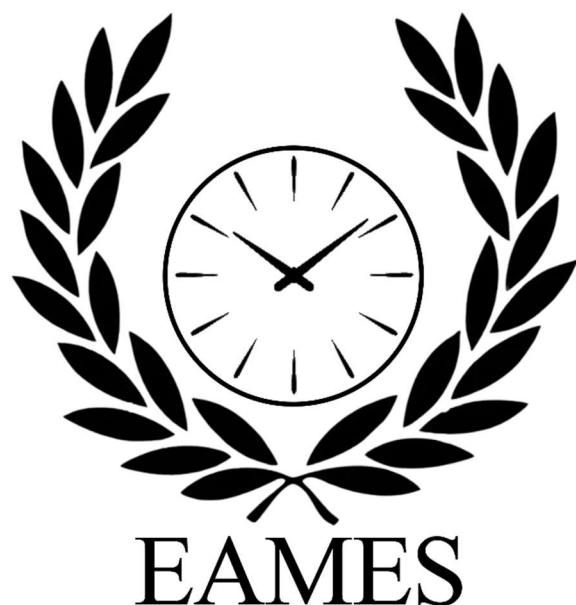

User's manual

Sportsman

Watch Controls

Your Statesman watch features a **screw-down crown** with three operating positions.

Position 0 – Locked (Screwed Down)

- The crown is fully screwed into the case.
- This position helps protect the watch against dust and moisture.
- Always ensure the crown is fully screwed down after setting the watch.

Position 1 – Manual Winding

- Unscrew the crown by turning it **anticlockwise** until it releases from the case.
- The crown will spring to Position 1.
- Turn the crown **clockwise** to manually wind the mainspring.
- Approximately 35 turns will provide sufficient power for normal operation.
- This timepiece features an automatic movement and will wind itself in normal use.

Position 2 – Quick-Set Date

- Pull the crown gently outward to the second position.
- Turn the crown **clockwise** to advance the date.
- Continue turning until the correct date is displayed in the three o'clock window.

Position 3 – Time Setting

- Pull the crown outward to the third position.
- Turn the crown in either direction to set the correct time.
- Ensure the date changes at midnight rather than noon when setting AM/PM time.
- This timepieces movement features a hacking seconds hand, therefore it will stop when time setting is engaged, allowing for more precise setting of time.

Bracelet

The Sportsman features a stainless-steel bracelet.

General Wear

To open the bracelet:

1. Flip the secondary claps into the Open position.
2. Depress the two buttons on the side of the clasp.
3. While still holding the clasp, allow it to unfold into the open position.

To close the bracelet:

1. Fold the clasp into the closed position. Ensure it latches into place, you should hear a soft click.
2. Flip the secondary clasp into the closed position.

Sizing The Bracelet

The bracelet features two sizing options.

Link Removal:

1. Remove the pins holding the links in place.
2. Place the protruding part of one link, into the recessed part of another, making a continual chain from the watch case to the bracelet.
3. Re-insert the pin.

Fine adjustment:

The side of the clasp features holes for fine adjustment of the bracelet.

1. Depress one side of the spring bar using a spring bar tool.
2. Slide the depressed side of the spring bar into the desired hole.
3. Repeat on the other side of the spring bar.

CAUTION: If not handled correctly, the spring bar may depart the clasp in the direction of the user.

Servicing

To avoid damage to the movement, it is advised that servicing is only done by a qualified technician.

Opening

Your timepiece features a crew down case back. To open the movement, this should be unscrewed anticlockwise.

CAUTION: When operating on the movement, do not touch the balance wheel or balance spring, as this may cause damage to the movement.

Timekeeping Adjustment

Due to the nature of mechanical movements, your timepiece may require occasional adjustments.

The balance mechanism features two adjustment levers.

Beat Error

To adjust the beat error, move the lower of the two levers, either clockwise or anticlockwise.

Accuracy

To adjust the accuracy of the timepiece, turn the higher of the two levers.